



M-POWER-WLC-US-10-Qi-TM

METRO 10W WIRELESS CHARGING UNIT INSTALL GUIDE



1

Rout/cut wood/stone/etc. for outlet as indicated on template labeled "ROUTING TEMPLATE".

CUT HOLE IN WOOD



2

Tighten the adjustment sleeve/mounting bracket onto the threads until it is hand tight.

INSTALL OUTLET



3

Screw the 4 screws into the top to hold the wireless charger in place.

PLUG IT IN

4


Insert the USB-A end into the power supply. Insert the other end of the power supply into the wireless charging units MicroUSB. Plug the power supply into an AC receptacle.

**NOTE: Max Torque Force when tightening nuts is:
0.4 N.cm ~ 0.6 N.cm**



M-POWER-WLC-US-10-Qi-TM INSTALL GUIDE

ROUTING TEMPLATE

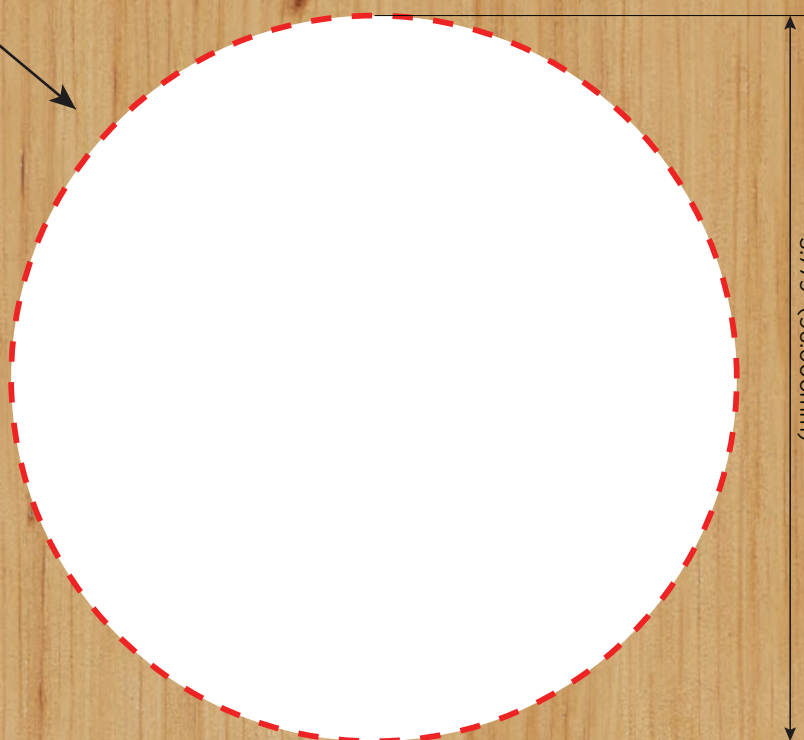

3.779" (96.000mm)



M-POWER-WLC-US-10-Qi-TM INSTALL GUIDE

